

# Watch Operation Guide 5657

## Contents

### Precautions

- Operating Precautions
- User Maintenance
- Battery
- Mobile Link Precautions

### Before Getting Started...

- General Guide
- Watch Face and Display Indicators
- Navigating Between Modes
- Cycling Between Timekeeping Mode Digital Display Contents
- Shifting Hands to Read the Digital Display
- Charging
- Viewing the Face in the Dark
- Useful Features

### Linking with a Phone

- Getting Ready
- Auto Time Adjustment
- Configuring Reminder Settings
- Configuring World Time Settings
- Adjusting Hand Alignment
- Phone Finder
- Configuring Watch Settings
- Changing the Home City Summer Time Setting
- Checking the Watch Charge Level
- Recording Your Current Location (TIME & PLACE)
- Connection
  - Connecting with a Phone
  - Disconnecting from Your Phone
  - Unpairing
  - If you purchase another phone

### Time Adjustment

- Using Watch Operations to Adjust the Time Setting
- Using the Watch in a Medical Facility or Aircraft

### World Time

- Using G-SHOCK Connected to Configure World Time City Settings
- Checking World Time
- World Time City Setting
- Swapping Your Home Time and World Time

### Alarm

- Using G-SHOCK Connected to Configure Alarm Settings
- Configuring Alarm Settings
- Enabling the Hourly Time Signal
- Turning Off an Alarm or the Hourly Time Signal

### Moving to Another Time Zone

### Stopwatch

- Split Times and Lap Times
- Measuring Elapsed Time
- Measuring a Split Time
- Measuring Lap Times

### Timer

- Using G-SHOCK Connected to Configure Timer Settings
- Setting the Countdown Start Time
- Using the Timer

### Reminder

- Creating a Reminder
- Checking Reminder Details

### Hand Alignment Adjustment

- Using G-SHOCK Connected to Adjust Hand Alignment
- Adjusting Hand Alignment

### Other Settings

- Changing the Date Display Format
- Specifying the Day of the Week Language
- Enabling the Button Operation Tone
- Configuring Power Saving Function Settings
- Returning the Watch to Its Factory Default Settings

### Other Information

- City Table
- Summer Time Table
- Supported Phones
- Specifications
- Copyrights and Registered Copyrights

### Troubleshooting

## Precautions

### Operating Precautions

#### ● Water Resistance

- The information below applies to watches with WATER RESIST or WATER RESISTANT marked on the back cover.

#### Water Resistance Under Daily Use

|   |             |
|---|-------------|
| Marking on watch front or on back cover | No BAR mark |
|---|-------------|

#### Example of Daily Use

|                              |     |
|------------------------------|-----|
| Hand washing, rain           | Yes |
| Water-related work, swimming | No  |
| Windsurfing                  | No  |
| Skin diving                  | No  |

#### Enhanced Water Resistance Under Daily Use

##### 5 Atmospheres

|   |      |
|---|------|
| Marking on watch front or on back cover | 5BAR |
|---|------|

#### Example of Daily Use

|                              |     |
|------------------------------|-----|
| Hand washing, rain           | Yes |
| Water-related work, swimming | Yes |
| Windsurfing                  | No  |
| Skin diving                  | No  |

##### 10 Atmospheres

|   |       |
|---|-------|
| Marking on watch front or on back cover | 10BAR |
|---|-------|

#### Example of Daily Use

|                              |     |
|------------------------------|-----|
| Hand washing, rain           | Yes |
| Water-related work, swimming | Yes |
| Windsurfing                  | Yes |
| Skin diving                  | Yes |

##### 20 Atmospheres

|   |       |
|---|-------|
| Marking on watch front or on back cover | 20BAR |
|---|-------|

#### Example of Daily Use

|                              |     |
|------------------------------|-----|
| Hand washing, rain           | Yes |
| Water-related work, swimming | Yes |
| Windsurfing                  | Yes |
| Skin diving                  | Yes |

- Do not use your watch for scuba diving or other types of diving that requires air tanks.
- Watches that do not have WATER RESIST or WATER RESISTANT marked on the back cover are not protected against the effects of sweat. Avoid using such a watch under conditions where it will be exposed to large amounts of sweat or moisture, or to direct splashing with water.
- Even if a watch is water resistant, note the usage precautions described below. Such types of use reduce water resistance performance and can cause fogging of the glass.
  - Do not operate the crown or buttons while your watch is submersed in water or wet.
  - Avoid wearing your watch while in the bath.
  - Do not wear your watch while in a heated swimming pool, sauna, or any other high temperature/high humidity environment.
  - Do not wear your watch while washing your hands or face, while doing housework, or while performing any other task that involves soaps or detergents.
- After submersion in seawater, use plain water to rinse all salt and dirt from your watch.
- To maintain water resistance, have the gaskets of your watch replaced periodically (about once every two or three years).
- A trained technician will inspect your watch for proper water resistance whenever you have its battery replaced. Battery replacement requires the use of special tools. Always request battery replacement from your original retailer or from an authorized CASIO service center.
- Some water-resistant watches come with fashionable leather bands. Avoid swimming, washing, or any other activity that causes direct exposure of a leather band to water.
- The inside surface of the watch glass may fog when the watch is exposed to a sudden drop in temperature. No problem is indicated if the fogging clears up relatively quickly. Sudden and extreme temperature changes (such as coming into an air conditioned room in the summer and standing close to an air conditioner outlet, or leaving a heated room in the winter and allowing your watch to come into contact with snow) can cause it to take longer for glass fogging to clear up. If glass fogging does not clear up or if you notice moisture inside of the glass, immediately stop using your watch and take it to your original retailer or to an authorized CASIO service center.
- Your water-resistant watch has been tested in accordance with International Organization for Standardization regulations.
- Band**
  - Tightening the band too tightly can cause you to sweat and make it difficult for air to pass under the band, which can lead to skin irritation. Do not fasten the band too tightly. There should be enough room between the band and your wrist so you can insert your finger.
  - Deterioration, rust, and other conditions can cause the band to break or come off of your watch, which in turn can cause band pins to fly out of position or to fall out. This creates the risk of your watch falling from your wrist and becoming lost, and also creates the risk of personal injury. Always take good care of your band and keep it clean.
  - Immediately stop using a band if you even notice any of the following: loss of band flexibility, band cracks, band discoloration, band looseness, band connecting pin flying or falling out, or any other abnormality. Take your watch to your original retailer or to a CASIO service center for inspection and repair (for which you will be charged) or to have the band replaced (for which you will be charged).

## ● Temperature

- Never leave your watch on the dashboard of a car, near a heater, or in any other location that is subject to very high temperatures. Do not leave your watch where it will be exposed to very low temperatures. Temperature extremes can cause your watch to lose or gain time, to stop, or otherwise malfunction.
- Leaving your watch in an area hotter than +60 °C (140 °F) for long periods can lead to problems with its LCD. The LCD may become difficult to read at temperatures lower than 0 °C (32 °F) and greater than +40 °C (104 °F).

## ● Impact

- Your watch is designed to withstand impact incurred during normal daily use and during light activity such as playing catch, tennis, etc. Dropping your watch or otherwise subjecting it to strong impact, however, can lead to malfunction. Note that watches with shock-resistant designs (G-SHOCK, BABY-G, G-MS) can be worn while operating a chain saw or engaging in other activities that generate strong vibration, or while engaging in strenuous sports activities (motocross, etc.).

## ● Magnetism

- The hands of analog and combination (analog-digital) watches are moved by a motor that uses magnetic force. When such a watch is close to a device (audio speakers, magnetic necklace, cell phone, etc.) that emits strong magnetism, the magnetism can cause timekeeping to slow down, speed up, or stop, resulting in the incorrect time being displayed.
- Very strong magnetism (from medical equipment, etc.) should be avoided because it can cause malfunction of your watch and damage to electronic components.

## ● Electrostatic Charge

- Exposure to very strong electrostatic charge can cause your watch to display the wrong time. Very strong electrostatic charge even can damage electronic components.
- Electrostatic charge can cause the display to go blank momentarily or cause a rainbow effect on the display.

## ● Chemicals

- Do not allow your watch to come into contact with thinner, gasoline, solvents, oils, or fats, or with any cleaners, adhesives, paints, medicines, or cosmetics that contain such ingredients. Doing so can cause discoloration of or damage to the resin case, resin band, leather, and other parts.

## ● Storage

- If you do not plan to use your watch for a long time, thoroughly wipe it free of all dirt, sweat, and moisture, and store it in a cool, dry place.

## ● Resin Components

- Allowing your watch to remain in contact with other items or storing it together with other items for long periods while it is wet can cause color on resin components to transfer to the other items, or the color of the other items to transfer to the resin components of your watch. Be sure to dry off your watch thoroughly before storing it and make sure it is not in contact with other items.
- Leaving your watch where it is exposed to direct sunlight (ultraviolet rays) for long periods or failure to clean dirt from your watch for long periods can cause it to become discolored.
- Friction caused by certain conditions (strong external force, sustained rubbing, impact, etc.) can cause discoloration of painted components.
- If there are printed figures on the band, strong rubbing of the printed area can cause discoloration.
- Leaving your watch wet for long periods can cause fluorescent color to fade. Wipe the watch dry as soon as possible after it becomes wet.
- Semi-transparent resin parts can become discolored due to sweat and dirt, and if exposed to high temperatures and humidity for long periods.
- Daily use and long-term storage of your watch can lead to deterioration, breaking, or bending of resin components. The extent of such damage depends on usage conditions and storage conditions.

## ● Leather Band

- Allowing your watch to remain in contact with other items or storing it together with other items for long periods while it is wet can cause the color of the leather band to transfer to the other items or the color of the other items to transfer to the leather band. Be sure to dry off your watch thoroughly with a soft cloth before storing it and make sure it is not in contact with other items.
- Leaving a leather band where it is exposed to direct sunlight (ultraviolet rays) for long periods or failure to clean dirt from a leather band for long periods can cause it to become discolored.

### **CAUTION:**

Exposing a leather band to rubbing or dirt can cause color transfer and discoloration.

## ● Metal Components

- Failure to clean dirt from metal components can lead to formation of rust, even if components are stainless steel or plated. If metal components exposed to sweat or water, wipe thoroughly with a soft, absorbent cloth and then place the watch in a well-ventilated location to dry.
- Use a soft toothbrush or similar tool to scrub the metal with a weak solution of water and a mild neutral detergent, or with soapy water. Next, rinse with water to remove all remaining detergent and then wipe dry with a soft absorbent cloth. When washing metal components, wrap the watch case with kitchen plastic wrap so it does not come into contact with the detergent or soap.

## ● Bacteria and Odor Resistant Band

- The bacteria and odor resistant band protects against odor generated by the formation of bacteria from sweat, which ensures comfort and hygiene. In order to ensure maximum bacteria and odor resistance, keep the band clean. Use an absorbent soft cloth to thoroughly wipe the band clean of dirt, sweat, and moisture. A bacteria and odor resistant band suppresses the formation of organisms and bacteria. It does not protect against rash due to allergic reaction, etc.

## ● Liquid Crystal Display

- Display figures may be difficult to read when viewed from an angle.

Note that CASIO Computer Co., Ltd. assumes no responsibility for any damage or loss suffered by you or any third party arising through the use of your watch or its malfunction.

## User Maintenance

### ● Caring for Your Watch

Remember that you wear your watch next to your skin, just like a piece of clothing. To ensure your watch performs at the level for which it is designed, keep it clean by frequently wiping with a soft cloth to keep your watch and band free of dirt, sweat, water and other foreign matter.

- Whenever your watch is exposed to sea water or mud, rinse it off with clean fresh water.
- For a metal band or a resin band with metal parts, use a soft toothbrush or similar tool to scrub the band with a weak solution of water and a mild neutral detergent, or with soapy water. Next, rinse with water to remove all remaining detergent and then wipe dry with a soft absorbent cloth. When washing the band, wrap the watch case with kitchen plastic wrap so it does not come into contact with the detergent or soap.
- For a resin band, wash with water and then wipe dry with a soft cloth. Note that sometimes a smudge like pattern may appear on the surface of a resin band. This will not have any effect on your skin or clothing. Wipe with a cloth to remove the smudge pattern.
- Clean water and sweat from a leather band by wiping with a soft cloth.
- Not operating a watch crown, buttons, or rotary bezel could lead to later problems with their operation. Periodically rotate the crown and rotary bezel, and press buttons to maintain proper operation.

### ● Dangers of Poor Watch Care

#### Rust

- Though the metal steel used for your watch is highly rust-resistant, rust can form if your watch is not cleaned after it becomes dirty.
  - Dirt on your watch can make it impossible for oxygen to come into contact with the metal, which can lead to breakdown of the oxidization layer on the metal surface and the formation of rust.
- Rust can cause sharp areas on metal components and can cause band pins to fly out of position or to fall out. If you ever notice any abnormality immediately stop using your watch and take it to your original retailer or to an authorized CASIO service center.
- Even if the surface of the metal appears clean, sweat and rust in crevasses can soil the sleeves of clothing, cause skin irritation, and even interfere with watch performance.

## Premature Wear

- Leaving sweat or water on a resin band or bezel, or storing your watch in an area subject to high moisture can lead to premature wear, cuts, and breaks.

## Skin Irritation

- Individuals with sensitive skin or in poor physical condition may experience skin irritation when wearing a watch. Such individuals should keep their leather band or resin band particularly clean. Should you ever experience a rash or other skin irritation, immediately remove your watch and contact a skin care professional.

## Battery

- The special rechargeable battery used by your watch is not intended to be removed or replaced by you. Use of a rechargeable battery other than the special one specified for your watch can damage your watch.
- The rechargeable (secondary) battery is charged when the solar panel is exposed to light, so it does not require regular replacement as the primary battery requires. Note, however, that long use or operating conditions can cause the capacity or charging efficiency of the rechargeable battery to deteriorate. If you feel that the amount of operation provided by charging is too short, contact your original retailer or CASIO service center.

## Mobile Link Precautions

### ● Legal Precautions

- This watch complies with or has received approval under the radio laws of various countries and geographical areas. Using this watch in an area where it does not comply with or has not received approval under applicable radio laws may be a criminal offense. For details, visit the CASIO Website.

<https://world.casio.com/ce/BLE/>

- Use of this watch inside of aircraft is restricted under the aviation laws of each country. Be sure to follow the instructions of airline personnel.

### ● Precautions when using Mobile Link

- When using this watch in combination with a phone, keep the watch and phone close to each other. A range of two meters is recommended as a guideline, but the local environment (walls, furniture, etc.), the structure of a building, and other factors may require a much closer range.
- This watch can be affected by other devices (electrical devices, audio-visual equipment, office equipment, etc.) In particular, it can be affected by operation of a microwave oven. The watch may not be able to communicate normally with a phone if a microwave oven is operating nearby. Conversely, this watch may cause noise in radio reception and the video image of a TV.
- Bluetooth of this watch uses the same frequency band (2.4 GHz) as wireless LAN devices, and use of such devices in close proximity of this watch may result in radio interference, slower communication speeds and noise for the watch and the wireless LAN device, or even communication failure.

### ● Stopping Radio Wave Emission by This Watch


The watch is emitting radio waves whenever the mode hand is pointing to  $\mathbb{X}$ .

In addition, the watch also connects phone automatically four times a day to adjust its time setting.

When in a hospital, on an aircraft, or in any other area where the use of radio waves is not allowed, use the operation below to stop radio wave generation.

#### ● Stopping Radio Wave Generation

Press any button to terminate the Bluetooth connection.

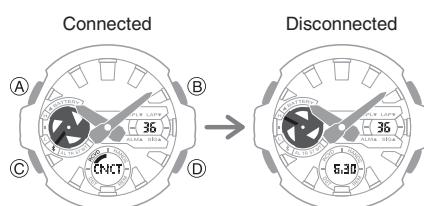

#### ● Disabling Auto Time Adjustment

Configure G-SHOCK Connected settings to disable time adjustment between the watch and phone.

[Using the Watch in a Medical Facility or Aircraft](#)

## Before Getting Started...

This section provides an overview of the watch and introduces convenient ways it can be used.

### Watch Features

- **Phone Linking**

The watch supports connection and communication with a Bluetooth capable phone.

- **World Time**

Display the current time in any one of 38 time zones\* around the globe.

\* Subject to being updated when connected with a phone.

- **Alarm**

An alarm sounds whenever a time specified by you is reached.

- **Stopwatch**

The stopwatch measures elapsed time in units of 1/100 second for the first hour, and in one-second units thereafter, for up to 24 hours.


- **Timer**

Countdown from a start time specified by you. An alarm sounds when the countdown reaches zero.

### Note

- The illustrations included in this operation guide have been created to facilitate explanation. An illustration may differ somewhat from the item it represents.

## General Guide

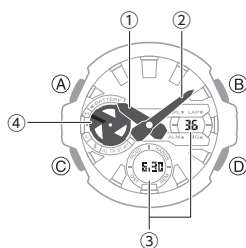

- ① Hour hand
- ② Minute hand
- ③ LCD
- ④ Mode hand  
Indicates the current mode.  
In the Timekeeping Mode, this hand shows the current charge level.

### A button

Pressing this button in the Timekeeping Mode cycles between displays.

### B button

Press to turn on illumination.


### C button

Each press cycles between watch modes. In any mode, hold down this button for at least one second to return to the Timekeeping Mode.

### D button

Pressing this button while any setting screen is displayed will change the setting.

## Watch Face and Display Indicators

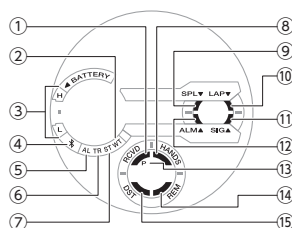

- ① Displayed when the watch successfully connects with a phone and adjusts its time setting.
- ② In the World Time Mode, the mode hand points to [WT].


- ③ Battery level  
In the Timekeeping Mode, the current charge level is indicated by the mode hand.
- ④ The mode hand points to  $\text{⌘}$  while the watch is connected with a phone.
- ⑤ In the Alarm Mode, the mode hand points to [AL].
- ⑥ In the Timer Mode, the mode hand points to [TR].
- ⑦ In the Stopwatch Mode, the mode hand points to [ST].
- ⑧ Flashes while the watch's hands are shifted for easier reading.
- ⑨ Displayed while a Stopwatch Mode split time measurement operation is in progress.
- ⑩ Displayed while a Stopwatch Mode lap measurement operation is in progress.
- ⑪ Displayed while the hourly time signal is enabled.
- ⑫ Displayed while an alarm is turned on.
- ⑬ Displayed during p.m. times while 12-hour timekeeping is being used.
- ⑭ Displayed while there is an anniversary and/or appointment reminder created using the "G-SHOCK Connected" app.
- ⑮ Displayed while the watch is indicating summer time.



## Navigating Between Modes

Each press of (C) cycles between watch modes.


- In any mode, hold down (C) for at least one second to return to the Timekeeping Mode.

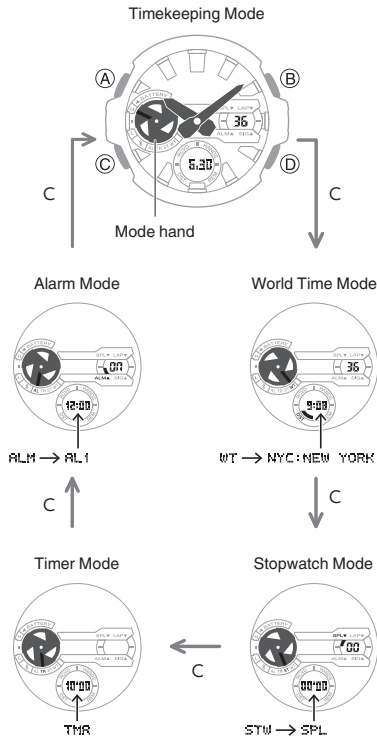

### Connecting with a Phone

Hold down (C) for at least three seconds to connect with a phone.


- To disconnect, press any button.

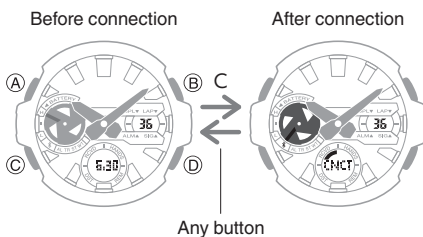


## Cycling Between Timekeeping Mode Digital Display Contents

Each press of (A) in the Timekeeping Mode toggles between the display information as shown below.

### When the watch is not paired with a phone

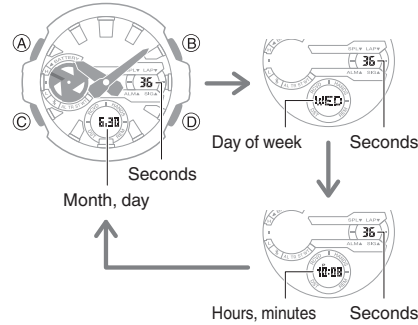

### When the watch is paired with a phone

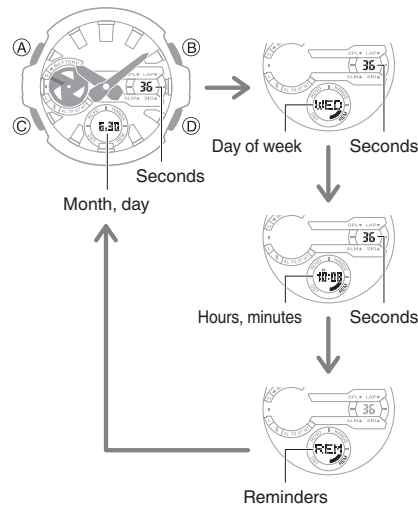

## Shifting Hands to Read the Digital Display

Hand shift moves the hands out of the way for easy viewing of display information.

1. While holding down (B), press (C).
  - This will shift the analog hands to allow easy viewing of display information.



2. To return the hands to their normal timekeeping positions, hold down (B) as you press (C) again, or press (C) to change to another mode.

### Note


- If you leave the watch with its hands shifted and do not perform any operation for about one hour, the hands will resume normal timekeeping automatically.

## Charging

This watch runs on power supplied from a rechargeable (secondary) battery that is charged by a solar panel. The solar panel is integrated into the face of the watch, and power is generated whenever the face is exposed to light.

### Charging the Watch

When you are not wearing the watch, put it in a location where it is exposed to bright light.

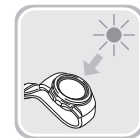

While you are wearing the watch, make sure that its face (solar panel) is not blocked from light by the sleeve of your clothing. Power generation efficiency is reduced even when the face of the watch is blocked only partially.

YES



NO




## Important!

- Depending on light intensity and local conditions, the watch may become hot to the touch when exposed to light for charging. Take care to avoid burn injury after charging. Also, avoid charging the watch under high-temperature conditions like the ones described below.
  - On the dashboard of a vehicle parked in the sun
  - Near an incandescent light bulb or other source of heat
  - Under direct sunlight or in other hot areas for long periods

## ● Checking the Charge Level

In the Timekeeping Mode, the current charge level is indicated by the mode hand.

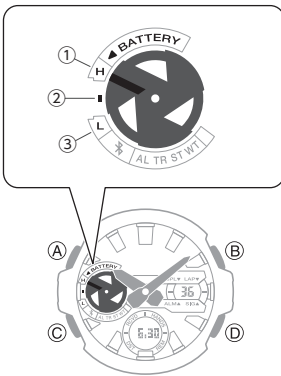

- Good (high charge)
- Good (medium charge)
- Low Battery

## ● Low Battery

A low battery will cause [LOW] to flash and will disable the functions below.

- Illumination
- Sounds (alarm, etc.)
- Connection with a phone



If the charge level drops even further, [CHG] will flash and the hour and minute hands will stop at 12 o'clock. If this happens, all functions are disabled.



## ● Dead Battery

The digital display will go blank if the battery goes dead. Memory data is lost, and watch settings are returned to their initial factory defaults.

## Important!

- Should the battery go low or go dead, expose the face (solar panel) to light as soon as possible.
- Exposing the watch to light while its battery is dead will cause [CHG] to start flashing. Expose the watch to light to charge it until the Timekeeping Mode screen re-appears.

## Note

- If [R] is flashing, it means that all functions, except for timekeeping, are disabled due to high momentary battery power consumption.



## ● Charging Time Guidelines

The table below shows guidelines for approximate charging times.

### Charging Times Required for 1 Day of Operation

| Light Level (Lux) | Approximate Charging Time |
|-------------------|---------------------------|
| 50,000            | 8 minutes                 |
| 10,000            | 30 minutes                |
| 5,000             | 48 minutes                |
| 500               | 8 hours                   |

### Times Required to Achieve Next Charge Level

- Sunny day, outdoors (50,000 lux)

|                              |          |
|------------------------------|----------|
| Dead battery → Medium charge | 3 hours  |
| Medium charge → High charge  | 24 hours |
| High charge → Full charge    | 7 hours  |

- Sunny day, near a window (10,000 lux)

|                              |          |
|------------------------------|----------|
| Dead battery → Medium charge | 7 hours  |
| Medium charge → High charge  | 91 hours |
| High charge → Full charge    | 25 hours |

- Overcast day, near a window (5,000 lux)

|                              |           |
|------------------------------|-----------|
| Dead battery → Medium charge | 11 hours  |
| Medium charge → High charge  | 147 hours |
| High charge → Full charge    | 40 hours  |

- Indoor fluorescent lighting (500 lux)

|                              |           |
|------------------------------|-----------|
| Dead battery → Medium charge | 147 hours |
| Medium charge → High charge  | -         |
| High charge → Full charge    | -         |

## Note

- Actual charging time depends on the local charging environment.



## ● Power Saving Function

Leaving the watch in a dark location for about one hour between the hours of 10 p.m. and 6 a.m. will cause the display to go blank, and the watch to enter Level 1 power saving. If the watch is left in this condition for six or seven days, the watch will enter Level 2 power saving.

### Power Saving Level 1 :

Digital display goes blank to save power. The watch can connect with a phone at this level.

### Power Saving Level 2 :

All hands stop and the digital display goes blank to save power. All functions are disabled.

## Recovering from Power Saving Operation

Use one of the operations below to exit power saving.

- Press any button.
- Move the watch to a bright location.

### Note

- You can enable or disable Power Saving.
  - 🔗 [Configuring Power Saving Function Settings](#)
- Note that the watch also may enter power saving if its face is blocked from light by your sleeve while you are wearing it.

## Viewing the Face in the Dark

The watch has an LED light that you can turn on for reading in the dark.

### ● Turning On Illumination

Pressing (B) turns on the light.



- Illumination will turn off automatically if an alarm starts to sound.
- Illumination is disabled while the hands are moving at high speed.
- The light may flicker when it turns on or off.


### ● Specifying the Illumination Duration

You can select either 1.5 seconds or three seconds as the illumination duration.

1. Enter the Timekeeping Mode.

🔗 [Navigating Between Modes](#)

2. Hold down (A) for at least two seconds until the name of the currently selected Home City is displayed.

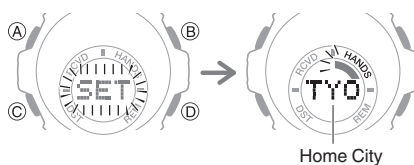


3. Press (C) 12 times to display [LIGHT].



4. Press (D) to select an illumination duration.

[LT1]: 1.5-second light

[LT3]: 3-second light

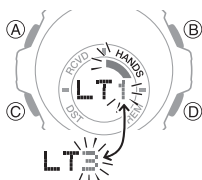

5. Press (A) to exit the setting screen.

## Useful Features

Pairing the watch with your phone makes a number of the watch's features easier to use.


### Auto time adjustment

🔗 [Auto Time Adjustment](#)




### Selection of More Than 300 World Time cities

🔗 [Configuring World Time Settings](#)

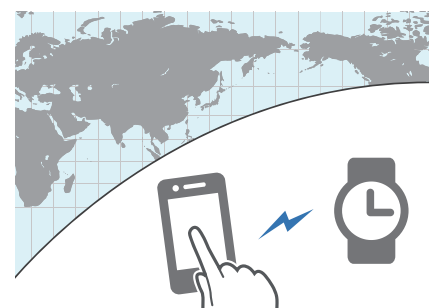

### Recording of Anniversaries and Appointments

🔗 [Configuring Reminder Settings](#)

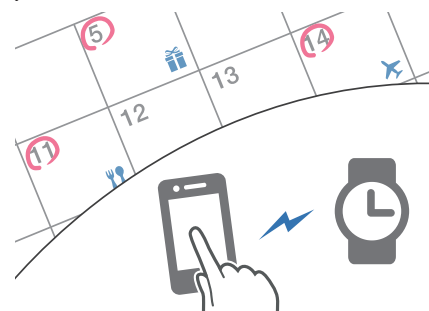

In addition, a number of other watch settings can be configured using your phone.

**To transfer data to a watch and to configure settings, you first need to pair the watch with your phone.**

🔗 [Getting Ready](#)

- Your phone needs to have the CASIO "G-SHOCK Connected" app installed to pair with the watch.

## Linking with a Phone

While there is a Bluetooth connection between the watch and phone (Mobile Link), the watch's current time setting is adjusted automatically. You can also change the watch's other settings.

### Note

- This function is available only while G-SHOCK Connected is running on the phone.
- This section describes watch and phone operations.
- 🕒 : Watch operation
- 📱 : Phone operation

## Getting Ready

To use your watch in combination with a phone, you first need to pair them. Perform the steps below to pair the watch with a phone.

### ● ① Install the app on your phone.

In Google Play or the App Store, search for the CASIO "G-SHOCK Connected" app and install it on your phone.

### ● ② Configure Bluetooth settings.

Enable the phone's Bluetooth.

### Note


- For details about setting procedures, see your phone documentation.

### ● ③ Pair the watch with a phone.

Before you can use the watch in combination with a phone, you first need to pair them.

1. Move the phone to be paired with close to (within one meter of) the watch.
2. 🕒 Tap the "G-SHOCK Connected" icon.

3. 📱 Perform the operation shown on the screen of the phone to be paired with.
  - If your phone is already paired with a watch, tap 🕒, tap the item for connecting with a new watch, and then tap this watch's name.
  - If a pairing prompt message appears, perform the operation shown on the phone screen.
  - If pairing fails for some reason, [ERR] will appear on the display momentarily and then the watch will return to the Timekeeping Mode. Perform the pairing procedure again from the beginning.

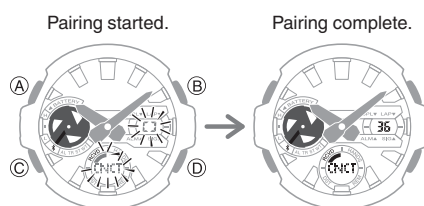


## Auto Time Adjustment

Your watch will connect with a phone at preset times each day and adjust its time settings automatically.

### ● Using Auto Adjust

Your watch adjusts its time setting four times a day according to a preset schedule. If you leave your watch in the Timekeeping Mode, it will perform the adjustment operation automatically as you go about your daily life, without any operation required by you.

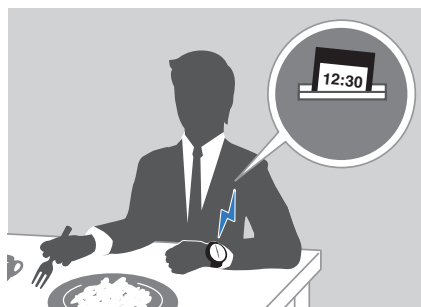

### Important!

- The watch may not be able to perform auto time adjustment under the conditions described below.
  - While the watch is too far away from its paired phone
  - While communication is not possible due to radio interference, etc.
  - While the phone is updating its system
  - While G-SHOCK Connected is not running on the phone

### Note


- If the watch does not indicate the correct time even if it is able to connect with a phone, adjust the hand positions.
  - 🕒 [Adjusting Hand Alignment](#)
- If there is a World Time City specified with G-SHOCK Connected, its time will also be adjusted automatically.
- The watch will connect with the phone and perform auto time adjustment at around 12:30 a.m., 6:30 a.m., 12:30 p.m. and 6:30 p.m. The connection is automatically terminated after auto time adjustment is complete.

### ● Triggering Immediate Time Adjustment

The watch's time setting will be adjusted automatically whenever you establish a connection between the watch and a phone. Whenever you want to trigger immediate time adjustment, perform the procedure below to connect with a phone.

1. 🕒 Enter the Timekeeping Mode.
  - 🕒 [Navigating Between Modes](#)
2. Move the phone close to (within one meter of) the watch.
3. 🕒 Press (D).
 

[TIME] flashes to indicate that the watch has started the connection operation. Once the watch and phone are connected, [OK] will appear, and then the watch will adjust its time setting based on information from the phone.

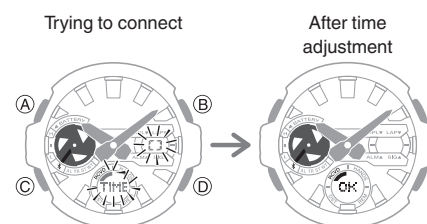

### Note


- The connection is terminated automatically after time adjustment is complete.
- If time adjustment fails for some reason, [ERR] will appear.
- [RCVD] flashes when the receive operation starts, and [RCVD] appears after it is complete.

## Configuring Reminder Settings

After you use G-SHOCK Connected to create reminders, appointments, anniversaries, or other events you need to remember, you can check them on the watch.

- You can have up to five reminders registered.

- Tap the “G-SHOCK Connected” icon.
- Hold down (C) for at least three seconds until [CNCT] starts to flash. Release the button when the mode hand moves to  $\times$ . When a connection is established between the watch and phone, [CNCT] will stop flashing.
  - If connection fails for some reason, [ERR] will appear on the display momentarily and then the watch will return to the Timekeeping Mode.

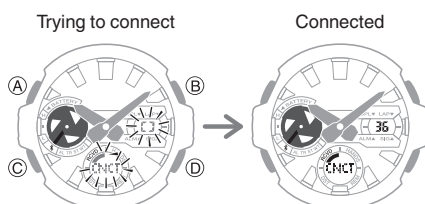


- Follow the instructions that appear on the screen to configure reminder settings.
  - You can input up to 18 alphanumeric characters as a reminder title.

### Note

- To prevent the appointments from being displayed on the watch, use G-SHOCK Connected to turn off the reminder setting.

## Configuring World Time Settings

Specifying a World Time City with G-SHOCK Connected causes the watch’s World Time City to change accordingly. Watch settings can be configured for auto summer time switching for the World Time City.

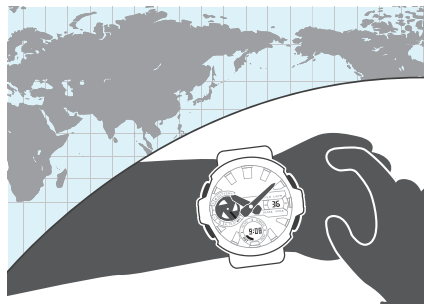


### Note

- G-SHOCK Connected World Time lets you select from among approximately 300 cities as the World Time City.
- You can use G-SHOCK Connected to configure settings for user cities that are not included in the watch’s built-in World Time Cities. You can then use G-SHOCK Connected to select a user city as your World Time City.

### ● Selecting a World Time City


- Tap the “G-SHOCK Connected” icon.
- Hold down (C) for at least three seconds until [CNCT] starts to flash. Release the button when the mode hand moves to  $\times$ . When a connection is established between the watch and phone, [CNCT] will stop flashing.
  - If connection fails for some reason, [ERR] will appear on the display momentarily and then the watch will return to the Timekeeping Mode.

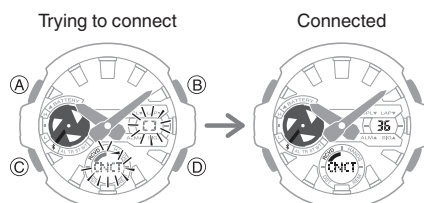

- Perform the operation shown on the phone screen. The World Time setting will be reflected on the watch.

### ● Configuring the Summer Time Setting

- Tap the “G-SHOCK Connected” icon.
- Hold down (C) for at least three seconds until [CNCT] starts to flash. Release the button when the mode hand moves to  $\times$ . When a connection is established between the watch and phone, [CNCT] will stop flashing.
  - If connection fails for some reason, [ERR] will appear on the display momentarily and then the watch will return to the Timekeeping Mode.

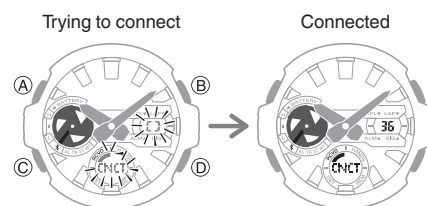

- Perform the operation shown on the phone screen to select a summer time setting.
  - “Auto”  
The watch switches between standard time and summer time automatically.
  - “OFF”  
The watch always indicates standard time.
  - “ON”  
The watch always indicates summer time.

### Note


- While the summer time setting is “Auto”, the watch will switch between standard time and summer time automatically. You do not need to switch between standard time and summer time manually. Even if you are in an area that does not observe summer time, you can leave the watch’s summer time setting as “Auto”.
- For information about summer time periods, refer the “Summer Time Table” or G-SHOCK Connected.

## ● Swapping Your World Time and Home Time

1. Tap the “G-SHOCK Connected” icon.
2. Hold down (C) for at least three seconds until [CNCT] starts to flash. Release the button when the mode hand moves to ✂.

When a connection is established between the watch and phone, [CNCT] will stop flashing.

- If connection fails for some reason, [ERR] will appear on the display momentarily and then the watch will return to the Timekeeping Mode.

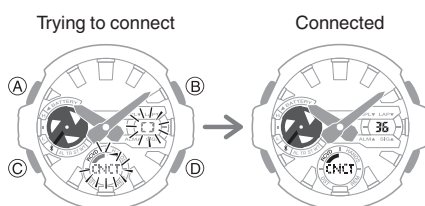

3. Perform the operation shown on the phone screen to swap your Home Time with your World Time.

### Note

- Auto time adjustment does not work for 24 hours after swapping of the Home Time and World Time.


## Adjusting Hand Alignment

If the hands are out of alignment even though auto time adjustment is being performed, use G-SHOCK Connected to adjust them.

1. Tap the “G-SHOCK Connected” icon.
2. Hold down (C) for at least three seconds until [CNCT] starts to flash. Release the button when the mode hand moves to ✂.

When a connection is established between the watch and phone, [CNCT] will stop flashing.

- If connection fails for some reason, [ERR] will appear on the display momentarily and then the watch will return to the Timekeeping Mode.

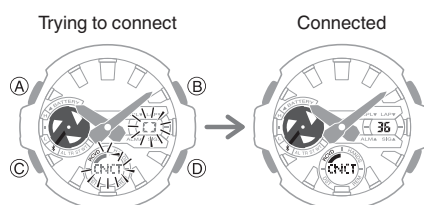

3. Perform the operation shown on the phone screen to correct hand alignment.


## Phone Finder

You can use phone finder to trigger a tone on the phone to make it easy to find. The tone is forced to sound even if the phone is in vibrate mode.

### Important!

- Do not use this function in areas where phone call tones are restricted.
- The tone sounds at a high volume. Do not use this function when listening to phone output over earphones.

1. If the watch is connected with a phone, press any button to terminate the connection.

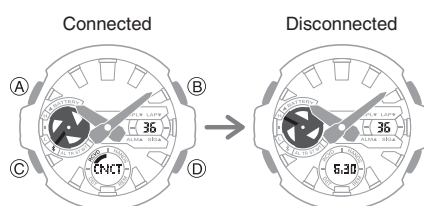


2. If the watch is in any mode besides the Timekeeping Mode, hold down (C) for at least one second to enter the Timekeeping Mode.

3. Hold down (D) for at least three seconds. Release the button when [FIND] starts to flash at low speed.

The phone will sound a tone when it establishes a connection with the watch.

- It will take a few seconds before the phone tone sounds.

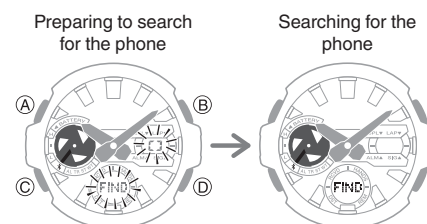

4. Press any button to stop the tone.
  - You can press any watch button to stop the phone tone only during the first 30 seconds after it starts to sound.


## Configuring Watch Settings

Alarm time, timer start time, and other settings can also be configured using G-SHOCK Connected.

1. Tap the “G-SHOCK Connected” icon.
2. Hold down (C) for at least three seconds until [CNCT] starts to flash. Release the button when the mode hand moves to ✂.

When a connection is established between the watch and phone, [CNCT] will stop flashing.


- If connection fails for some reason, [ERR] will appear on the display momentarily and then the watch will return to the Timekeeping Mode.

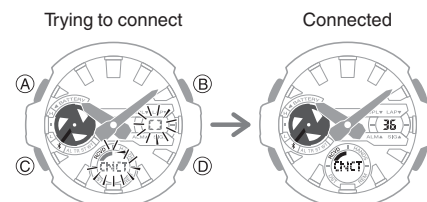

3. Select the setting you want to change and then perform the operation shown on the phone screen.

## Changing the Home City Summer Time Setting

1. Tap the “G-SHOCK Connected” icon.
2. Hold down (C) for at least three seconds until [CNCT] starts to flash. Release the button when the mode hand moves to ✂. When a connection is established between the watch and phone, [CNCT] will stop flashing.
  - If connection fails for some reason, [ERR] will appear on the display momentarily and then the watch will return to the Timekeeping Mode.

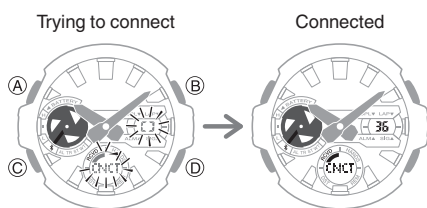


3. Perform the operation shown on the phone screen to change your Home City summer time setting.

## Checking the Watch Charge Level

Use the procedure below to check the current charge level with G-SHOCK Connected.

1. Tap the “G-SHOCK Connected” icon.
2. Hold down (C) for at least three seconds until [CNCT] starts to flash. Release the button when the mode hand moves to ✂. When a connection is established between the watch and phone, [CNCT] will stop flashing.
  - If connection fails for some reason, [ERR] will appear on the display momentarily and then the watch will return to the Timekeeping Mode.

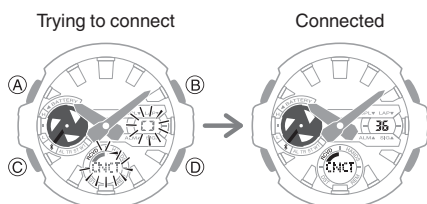

3. Use G-SHOCK Connected to check the charge level.

## Recording Your Current Location (TIME & PLACE)

While traveling or otherwise on the go, you can use the procedure below to record your current location, along with the time and date, on your phone. Recorded location information can be viewed on a G-SHOCK Connected map while the watch is connected with your phone.

### ● Recording Your Current Location

1. Enter the Timekeeping Mode.
  - ↳ Navigating Between Modes
2. When you are in the location you want to record, press (D).


This records, in phone memory, the latitude and longitude of the location you are in when you press the button, along with the date and time.

### ● Viewing a Recorded Location on a Map

1. Tap the “G-SHOCK Connected” icon.
2. Hold down (C) for at least three seconds until [CNCT] starts to flash. Release the button when the mode hand moves to ✂.

When a connection is established between the watch and phone, [CNCT] will stop flashing.

- If connection fails for some reason, [ERR] will appear on the display momentarily and then the watch will return to the Timekeeping Mode.

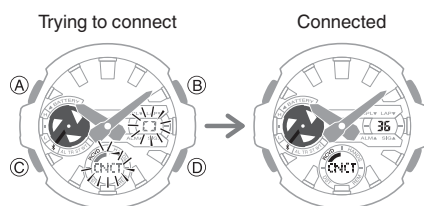

3. Perform the operation shown on the phone screen to view recorded location information.

### Note

- You can use G-SHOCK Connected to delete recorded location information.

## Connection

### Connecting with a Phone

Your watch can connect with a phone that is paired with it.


- If the watch is not paired with the phone you want to connect with, refer to the information below and pair them.

↳ Pair the watch with a phone.

### ● Connecting with a Phone

1. Move the phone close to (within one meter of) the watch.
2. Hold down (C) for at least three seconds until [CNCT] starts to flash. Release the button when the mode hand moves to ✂. When a connection is established between the watch and phone, [CNCT] will stop flashing.

- If connection fails for some reason, [ERR] will appear on the display momentarily and then the watch will return to the Timekeeping Mode.

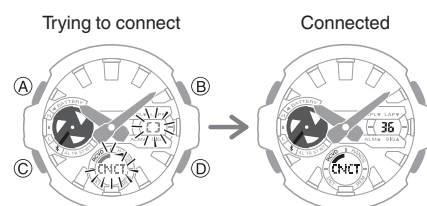

### Important!

- If you have problems establishing a connection, it could mean that G-SHOCK Connected is not running on your phone. On your phone's home screen, tap the “G-SHOCK Connected” icon. After the app starts up, hold down the watch's (C) button for at least three seconds.




## Note

- The connection will be terminated if you do not perform any operation on the watch or phone for a fixed amount of time.

To specify the connection limit time, perform the following operation with G-SHOCK Connected: "Watch settings" → "Connection time". Next, select a setting of 3 minutes, 5 minutes, or 10 minutes.

## Disconnecting from Your Phone

Pressing any button will terminate a Bluetooth connection and return to the Timekeeping Mode.

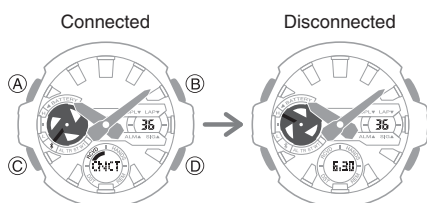

## Unpairing


Unpairing the watch from a phone requires both G-SHOCK Connected and watch operations.

### Deleting Pairing Information from G-SHOCK Connected

- Tap the "G-SHOCK Connected" icon.
- Perform the operation shown on the phone screen to unpair.


### Deleting Pairing Information from the Watch

- Hold down (C) for at least one second to enter the Timekeeping Mode.
- Hold down (A) for at least two seconds. Release the button when the name of the currently selected Home City appears on the display.

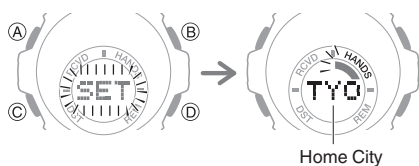


- Press (C) twice.

This causes the seconds to flash.

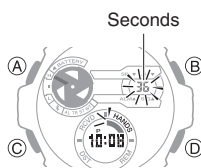

- Hold down (B) for at least three seconds. This will cause the [PAIR] and [CLR] indicators to alternate on the display. Release the button when only [CLR] is displayed.

This deletes the pairing information from the watch and returns to the timekeeping display.

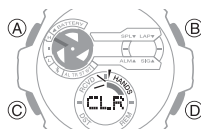

- Press (A) to return to the Timekeeping Mode.

## If you purchase another phone

You need to perform the pairing operation whenever you want to establish a Bluetooth connection with a phone for the first time.

- [Deleting Pairing Information from the Watch](#)
- [Pair the watch with a phone.](#)

## Time Adjustment

Your watch can connect with a phone to obtain information that it uses to adjust its date and time setting.

### Important!

- When you are on an aircraft or in any other location where radio signals area may cause problems, enable the watch's Airplane Mode to disable the connection with your phone.
  - [Using the Watch in a Medical Facility or Aircraft](#)

Referring to the information below, configure the time setting in accordance with the method that suits your own lifestyle.

### Do you use a phone?

Time adjustment by connecting with your phone is recommended.

- [Getting Ready](#)
- [Auto Time Adjustment](#)



### If your phone cannot connect with the watch

You can adjust time settings by performing operations on the watch.

- [Using Watch Operations to Adjust the Time Setting](#)





## Using Watch Operations to Adjust the Time Setting

If your watch cannot connect with a phone for some reason, you can use watch operations to adjust date and time settings.


### ● Setting a Home City

Use the procedure in this section to select a city to use as your Home City. If you are in an area that observes summer time, you can also configure a summer time setting.

#### Note

- The initial factory default summer time setting for all cities is [AUTO]. In many cases, the [AUTO] setting lets you use the watch without switching between summer time and standard time.

1. Enter the Timekeeping Mode.  
[Navigating Between Modes](#)
2. Hold down (A) for at least two seconds. Release the button when the name of the currently selected Home City appears on the display.

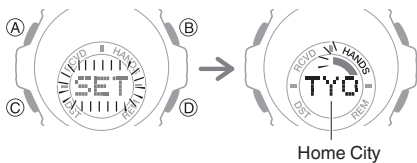

3. Use (B) and (D) to change the Home City setting.
  - For details refer to the information below.  
[City Table](#)

4. Press (C).
5. Use (D) to select a summer time setting. Each press of (D) cycles through available settings in the sequence shown below.


- [AUTO]  
The watch switches between standard time and summer time automatically.
- [OFF]  
The watch always indicates standard time.
- [ON]  
The watch always indicates summer time.




6. Press (A) to complete the setting operation.

### ● Setting the Time/Date

1. Enter the Timekeeping Mode.  
[Navigating Between Modes](#)
2. Hold down (A) for at least two seconds. Release the button when the name of the currently selected Home City appears on the display.

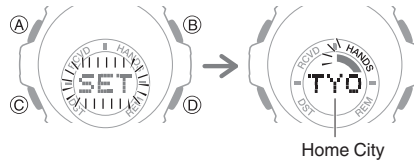

3. Keep pressing (C) until the setting you want to change is flashing.
  - Each press of (C) moves the flashing to the next setting in the sequence shown below.

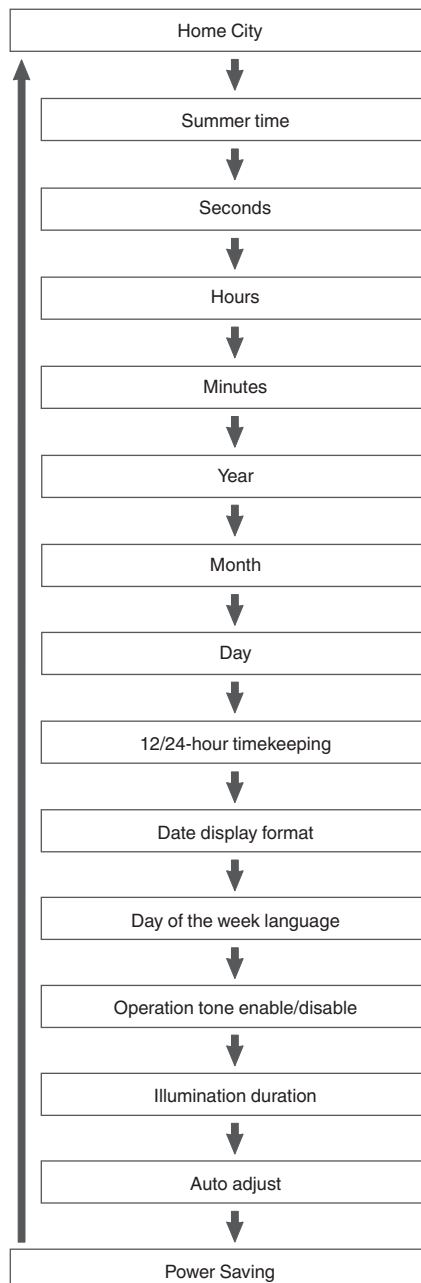


4. Configure the date and time settings.
  - To reset the seconds to 00: Press (D). 1 is added to the minutes when the current count is between 30 and 59 seconds.
  - Use (B) and (D) to change the other settings.
5. Repeat steps 3 and 4 to select time and date settings.
6. Press (A) to complete the setting operation.

### ● Switching between 12-hour and 24-hour Timekeeping

You can specify either 12-hour format or 24-hour format for the time display.


1. Enter the Timekeeping Mode.  
[Navigating Between Modes](#)
2. Hold down (A) for at least two seconds. Release the button when the name of the currently selected Home City appears on the display.

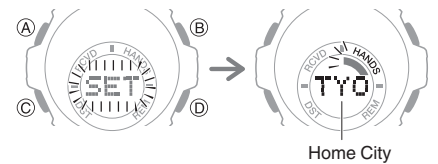

3. Press (C) eight times. This causes [12H] or [24H] to flash on the display.



4. Press (D) to toggle the setting between [12H] (12-hour timekeeping) and [24H] (24-hour timekeeping).

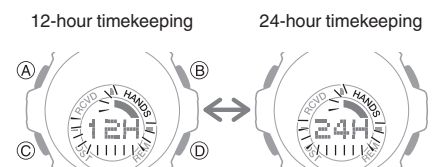


5. Press (A) to complete the setting operation.

## Using the Watch in a Medical Facility or Aircraft

Whenever you are in a hospital, on an aircraft, or in any other location where connection with a phone may cause problems, you can perform the procedure below to disable auto time adjustment. To re-enable auto time adjustment, perform the same operation again.

1. Enter the Timekeeping Mode.  
[Navigating Between Modes](#)
2. Hold down (A) for at least two seconds. Release the button when the name of the currently selected Home City appears on the display.

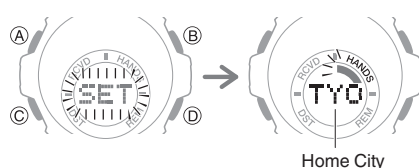

3. Press (C) 13 times.  
This displays [RCVD].




4. Press (D) to toggle between the auto time adjustment settings.  
 [OFF]: Auto time adjustment disabled.  
 [ON]: Auto time adjustment enabled.
5. Press (A) to complete the setting operation.

### Note

- The auto time adjustment setting can be changed only while the watch is paired with a phone.

## World Time

World Time lets you look up the current time in any one of 38 cities around the globe, and UTC (Coordinated Universal Time).

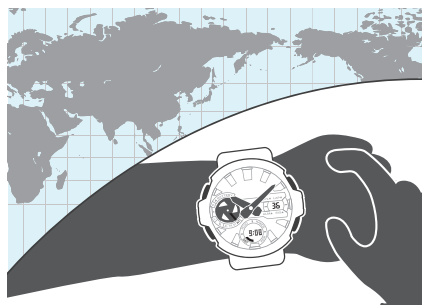

## Using G-SHOCK Connected to Configure World Time City Settings

If the watch is paired with a phone, you can also use G-SHOCK Connected to set the World Time city.


[Configuring World Time Settings](#)

### Note

- World Time cities that can be selected only by using G-SHOCK Connected cannot be selected using watch operations.

## Checking World Time

1. Enter the World Time Mode.  
[Navigating Between Modes](#)  
 After the currently selected World Time City name appears, the watch will display the current time in that city.
- You can return to the World Time City display by pressing (A) or (D).

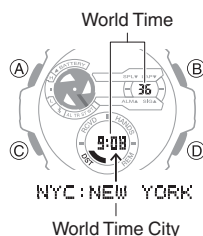


## World Time City Setting

Use the procedure in this section to select a World Time city. If you are in an area that observes summer time, you can also configure a summer time setting.

### Note

- The initial factory default summer time setting for all cities is [AUTO]. In many cases, the [AUTO] setting lets you use the watch without switching between summer time and standard time.

1. Enter the World Time Mode.  
[Navigating Between Modes](#)
2. Use (D) to display the city you want.

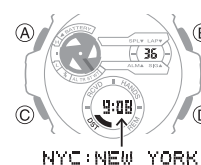

3. To change the summer time setting, hold down (A) for at least two seconds. Release the button when [AUTO] starts to flash.



4. Use (D) to change the summer time setting.  
 Each press of (D) cycles through settings in the sequence shown below.
  - [AUTO]  
The watch switches between standard time and summer time automatically.
  - [OFF]  
The watch always indicates standard time.
  - [ON]  
The watch always indicates summer time.
5. Press (A) to exit the setting screen.


## Note

- While [UTC] is selected as the city, you will not be able to change or check the summer time setting.
- If you select a World Time City with G-SHOCK Connected and then change to a different city with a watch operation, the G-SHOCK Connected city information is deleted from the watch.

[Configuring World Time Settings](#)

## Swapping Your Home Time and World Time

In the World Time mode, press (A) and (B) at the same time to swap your Home City time with your World Time.

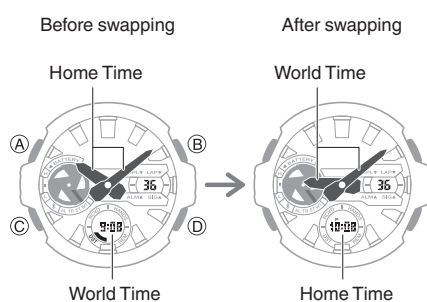

## Note

- This function comes in handy when you need to move to another time zone. For details about how to use it, go to the section below.


[Moving to Another Time Zone](#)

## Alarm

The watch will beep when an alarm time is reached. You can set up to five different alarms. The hourly time signal causes the watch to beep every hour on the hour.

- The alarm sound is muted in the cases described below.
  - When battery power is low
  - When watch is at Level 2 power saving

[Power Saving Function](#)

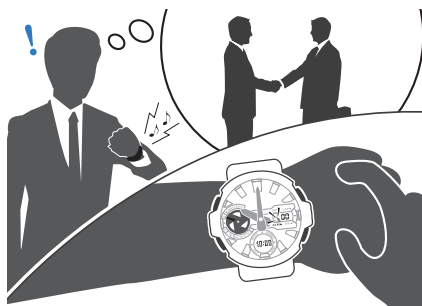


## Using G-SHOCK Connected to Configure Alarm Settings

If the watch is paired with a phone, you can also use G-SHOCK Connected to set alarms.


[Configuring Watch Settings](#)

## Configuring Alarm Settings

1. Enter the Alarm Mode.
  - [Navigating Between Modes](#)
2. Press (D) to scroll through alarm numbers ([AL1] to [AL5]) until the alarm you want to configure is displayed.

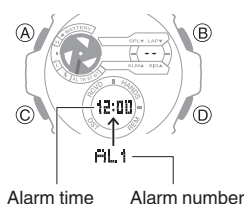

3. Hold down (A) for at least two seconds. Release the button when the hours digits start to flash.

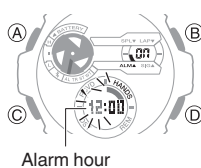


4. Use (B) and (D) to change the hour setting.

- If you are using 12-hour timekeeping, [P] indicates p.m.



5. Press (C).

This causes the minutes digits to flash.

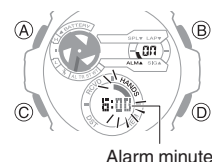

6. Use (B) and (D) to set the minute setting.

7. Press (A) to exit the setting screen.

- [ALM] is shown on the display while an alarm is set.



8. Hold down (C) for at least one second to return to the Timekeeping Mode.

### ● To stop the alarm


Pressing any button while the beeper is sounding stops it.

## Note

- A beeper sounds for 10 seconds when an alarm time is reached.
- The watch will automatically return from the Alarm Mode to the Timekeeping Mode if you do not perform any operation for about two or three minutes.

## Enabling the Hourly Time Signal

1. Enter the Alarm Mode.  
[🔍 Navigating Between Modes](#)
2. Press (D) to display the hourly time signal screen ([SIG]).

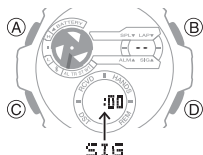

3. Press (A) to toggle the hourly time signal between enabled (on) and disabled (off).
  - [SIG] is displayed while the hourly time signal is enabled



4. Hold down (C) for at least one second to return to the Timekeeping Mode.


## Turning Off an Alarm or the Hourly Time Signal

To stop an alarm or the hourly time signal from sounding, perform the steps below to turn it off.


- To have an alarm or hourly time signal sound again, turn it back on.

### Note

- Indicators are displayed while any of the alarms or the hourly time signal is turned on.
- The applicable indicators are not displayed while all of the alarms are turned off and/or the hourly time signal is turned off.

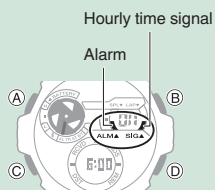

1. Enter the Alarm Mode.  
[🔍 Navigating Between Modes](#)
2. Use (D) to scroll through the alarm ([AL1] to [AL5]) and hourly time signal ([SIG]) screens until the one you want to turn off is displayed.

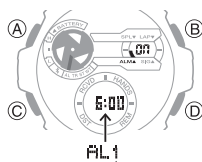

Alarm or hourly time signal

3. Press (A) to turn off the displayed alarm or the hourly time signal.
  - Each press of (A) toggles between ON and OFF.
  - Turning off all of the alarms and the hourly time signal causes [ALM] and [SIG] to disappear from the display.



4. Hold down (C) for at least one second to return to the Timekeeping Mode.

### Note


- If [ALM] remains on the display, it means that at least one alarm is still turned on. To turn off all of the alarms, repeat steps 2 and 3 until the [ALM] indicator is no longer displayed.

## Moving to Another Time Zone

Use the procedure below to easily change day and time settings of the watch to a destination location.

### ● Before Boarding

1. Configure the World Time to the current time at your destination.

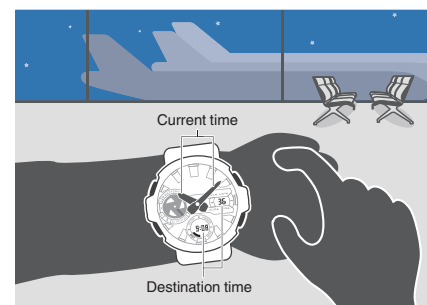

[🔍 Using G-SHOCK Connected to Configure Settings](#)

[🔍 Using Watch Operations to Configure Settings](#)


2. Disable auto time adjustment.



[🔍 Using the Watch in a Medical Facility or Aircraft](#)

## ● After Arriving

1. Swap the origin time zone time with the destination time zone time.

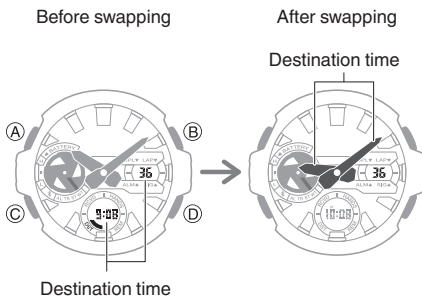

- 🔗 [Using G-SHOCK Connected to Configure Settings](#)
- 🔗 [Using Watch Operations to Configure Settings](#)

2. Enable auto time adjustment.

- 🔗 [Using the Watch in a Medical Facility or Aircraft](#)

3. Adjust the time setting.

- 🔗 [Triggering Immediate Time Adjustment](#)

## Stopwatch

The stopwatch measures elapsed time in 1/100-second units for the first hour, and in 1-second units after that for up to 24 hours.


In addition to normal elapsed time measurements, the stopwatch also lets you take split time and lap time readings.



## Split Times and Lap Times


### ● Split time

A split time is the time elapsed from the start, up to any point along the course of an event.

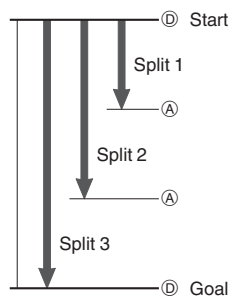

### ● Lap time

A lap time shows the time elapsed during a specific lap around a track, etc.

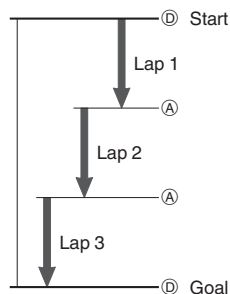


## Measuring Elapsed Time


1. Enter the Stopwatch Mode.

🔗 [Navigating Between Modes](#)

2. Use the operations below to measure elapsed time.



- Elapsed time is shown in 1/100-second units for the first hour of the measurement. After the first hour, elapsed time is shown in one-second units.

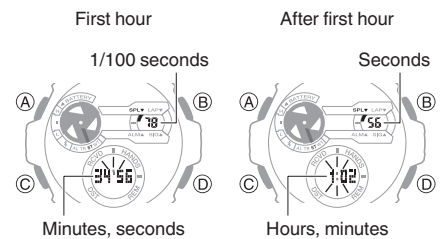

3. Press (A) to reset the stopwatch to all zeros.

## Measuring a Split Time


1. Enter the Stopwatch Mode.

🔗 [Navigating Between Modes](#)

- If a lap time measurement operation is displayed, clear it before proceeding to step 2.

🔗 [Measuring Lap Times](#)

2. Press (A) to display [SPL].

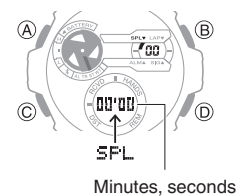


3. Use the operations below to measure elapsed time.

- Pressing (A) displays the elapsed time up to that point (split time), alternating with [SPL] for about eight seconds.



- Elapsed time is shown in 1/100-second units for the first hour of the measurement. After the first hour, elapsed time is shown in one-second units.

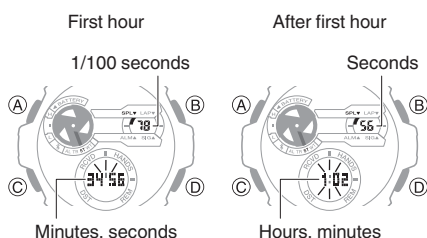

4. Press (A) to reset the stopwatch to all zeros.

## Measuring Lap Times


1. Enter the Stopwatch Mode.

[Navigating Between Modes](#)

- If a split time measurement operation is displayed, clear it before proceeding to step 2.


[Measuring a Split Time](#)

2. Press (A) to display [LAP].

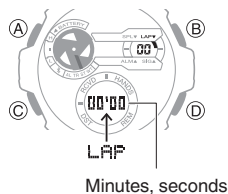


3. Use the operations below to measure elapsed time.

- Each time you press (A), the watch displays the time elapsed (lap time) since the last lap time operation, alternating with the stopwatch number for about eight seconds.



- Elapsed lap time is displayed in 1/100-second units for the first hour. After that, it is displayed in one-second units.

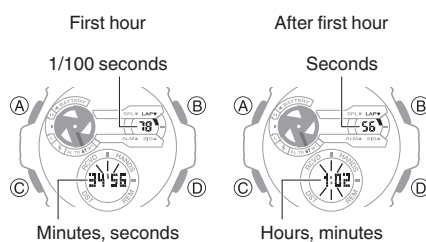


4. Press (A) to reset the stopwatch to all zeros.

## Timer

The timer counts down from a start time specified by you. A beeper sounds when the end of the countdown is reached.

- The beeper is muted when battery power is low.

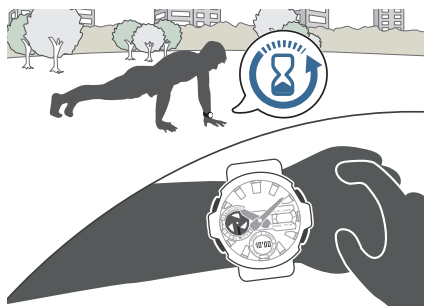

## Using G-SHOCK Connected to Configure Timer Settings

If the watch is paired with a phone, you can also use G-SHOCK Connected to set the timer start time.

[Configuring Watch Settings](#)

## Setting the Countdown Start Time

The start time can be set in 1-second units up to 60 minutes.

- If a timer countdown operation is in progress, reset the timer to its current start time before performing this operation.


[Using the Timer](#)

1. Enter the Timer Mode.

[Navigating Between Modes](#)

2. Hold down (A) for at least two seconds. Release the button when the minutes setting starts to flash.


This causes the minutes digits to flash.

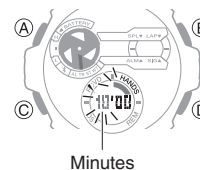

3. Use (B) and (D) to change the minutes setting.

4. Press (C).

This causes the seconds digits to flash.

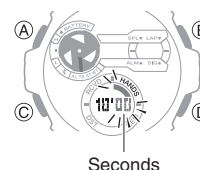

5. Use (B) and (D) to change the seconds setting.

6. Press (A) to exit the setting screen.

### Note


- Setting a start time of 00'00 will perform a countdown of 60 minutes.



## Using the Timer


1. Enter the Timer Mode.

[🔗 Navigating Between Modes](#)

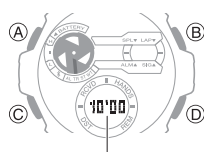

Minutes, seconds

2. Use the operations below to perform a timer operation.

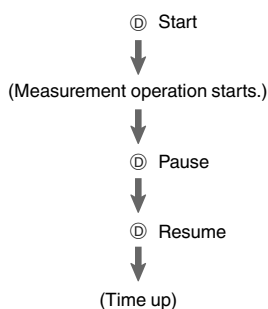


- A beeper will sound for 10 seconds to let you know when the end of a countdown is reached.
- You can reset a paused countdown to its start time, by pressing (A).

3. Press any button to stop the tone.

## Reminder

After you create a reminder for an appointment, anniversary, or some other event you don't want to forget, the watch will remind you when that day arrives.

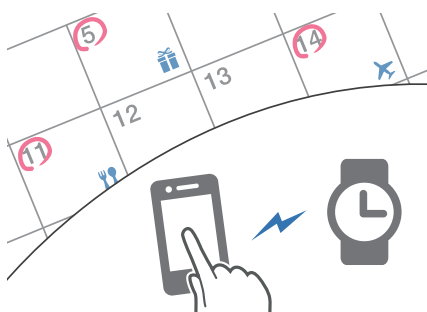

## Creating a Reminder


Use G-SHOCK Connected to create reminders.

- To use G-SHOCK Connected, you first need to pair your watch with a phone. [🔗 Getting Ready](#)
- If the watch is already paired with a phone, use G-SHOCK Connected to create reminders. [🔗 Configuring Reminder Settings](#)

## Checking Reminder Details


### • Checking reminders from tomorrow onwards

The [REM] indicator appears on the display if you use G-SHOCK Connected to create a reminder that is after today's date. Pressing (A) will switch the Timekeeping Mode screen to the REM display, which will show reminder item dates or days of the week, followed by their titles.

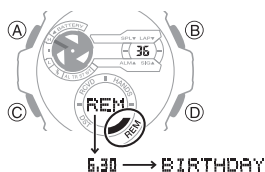

### • Checking today's reminders

[REM] flashes on the display during a day is when there is an anniversary or event that was created with G-SHOCK Connected. Pressing (A) will switch the Timekeeping Mode screen to the REM display, which will show the titles of today's reminder items.

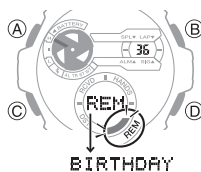

## Hand Alignment Adjustment

Strong magnetism or impact can cause the time indicated by the analog hands to become different from the time on the digital display. If this happens, adjust hand alignment.

## Using G-SHOCK Connected to Adjust Hand Alignment

If the watch is paired with a phone, you can also use G-SHOCK Connected to adjust hand alignment.


[🔗 Adjusting Hand Alignment](#)

## Adjusting Hand Alignment

1. Enter the Timekeeping Mode. [🔗 Navigating Between Modes](#)
2. Hold down (A) for at least five seconds. Release the button when [SUB] starts to flash. This enables adjustment of mode hand alignment.


After 3.5 seconds

After five seconds

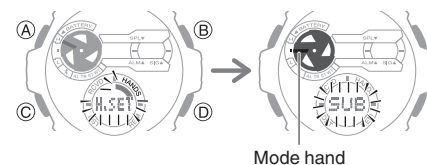

3. If the mode hand is not aligned with 9 o'clock, use (B) and (D) to align it.
4. Press (C). This enables adjustment of the hour and minute hands.

Hour hand      Minute hand

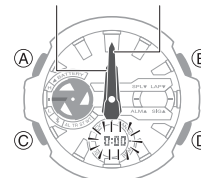


5. If the hour and minute hands are not at 12 o'clock, use (B) and (D) to align them.
6. Press (A) to exit the setting screen.

## Other Settings

This section explains other watch settings you can configure.

### Changing the Date Display Format

1. Enter the Timekeeping Mode.  
[Navigating Between Modes](#)
2. Hold down (A) for at least two seconds until the name of the currently selected Home City is displayed.

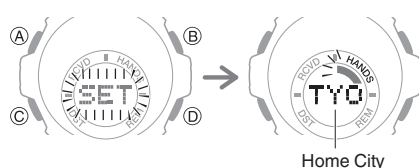

3. Press (C) nine times.  
This displays a screen for selecting the date display format.




4. Press (D) to select a date display format.  
[M.DD]: Month, day  
[DD.M]: Day, month
5. Press (A) to exit the setting screen.

### Specifying the Day of the Week Language

You can select any one of six languages for the day of the week display in the Timekeeping Mode.

1. Enter the Timekeeping Mode.  
[Navigating Between Modes](#)
2. Hold down (A) for at least two seconds until the name of the currently selected Home City is displayed.

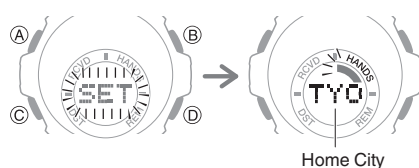

3. Press (C) 10 times.  
This causes the language setting to flash.




4. Use (D) to select a language.  
[ENG]: English  
[ESP]: Spanish  
[FRA]: French  
[DEU]: German  
[ITA]: Italian  
[PyC]: Russian
5. Press (A) to exit the setting screen.

### Enabling the Button Operation Tone

Use the procedure below to enable or disable the tone that sounds when you press a button.


1. Enter the Timekeeping Mode.  
[Navigating Between Modes](#)
2. Hold down (A) for at least two seconds until the name of the currently selected Home City is displayed.

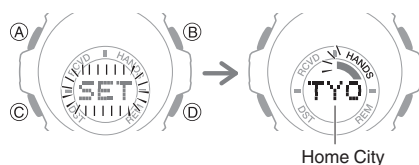

3. Press (C) 11 times.  
This causes [KEY♪] or [MUTE] to flash on the display.



4. Press (D) to select [KEY♪] or [MUTE].  
[KEY♪]: Operation tone enabled.  
[MUTE]: Operation tone muted.

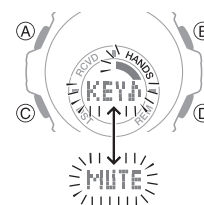


5. Press (A) to exit the setting screen.

#### Note

- Note that alarm and timer tones will still sound even while the operation tone is muted.

### Configuring Power Saving Function Settings

1. Enter the Timekeeping Mode.  
[Navigating Between Modes](#)
2. Hold down (A) for at least two seconds until the name of the currently selected Home City is displayed.

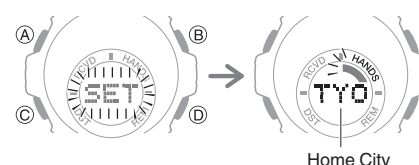

3. Press (C) 14 times.  
This displays [PSON] or [PSOF].



4. Press (D) to toggle between ON and OFF.  
[PSON]: Power Saving enabled.  
[PSOF]: Power Saving disabled.
5. Press (A) to exit the setting screen.

#### Note

- For details about Power Saving, refer to the information below.  
[Power Saving Function](#)


## Returning the Watch to Its Factory Default Settings

This section explains how to return the watch settings below to their initial factory defaults.


- Watch Settings
- Reminder
- Stopwatch
- Timer
- Alarm

1. Enter the Timekeeping Mode.

2. Hold down (A) for at least two seconds until the name of the currently selected Home City is displayed.

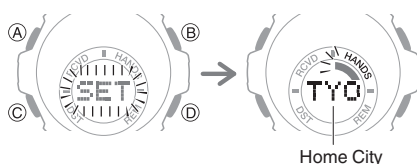

3. Press (C) twice.  
This causes the seconds to flash.

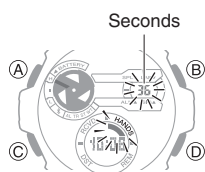

4. Hold down (B) for at least seven seconds. This will cause the [ALL] and [RESET] indicators to alternate on the display. Release the button when only [RESET] is displayed.



5. Press (A) to exit the setting screen.

### Note

- Resetting the watch will also delete information for pairing the watch with a phone, and unpair them.

## Other Information

This section provides non-operational information you also need to know. Refer to this information as required.

### City Table

| City                     |                            | Offset |
|--------------------------|----------------------------|--------|
| UTC                      | Coordinated Universal Time | 0      |
| LON:<br>LONDON           | London                     | 0      |
| PAR:<br>PARIS            | Paris                      | +1     |
| ATH:<br>ATHENS           | Athens                     | +2     |
| JED:<br>JEDDAH           | Jeddah                     | +3     |
| THR:<br>TEHRAN           | Tehran                     | +3.5   |
| DXB:<br>DUBAI            | Dubai                      | +4     |
| KBL:<br>KABUL            | Kabul                      | +4.5   |
| KHI:<br>KARACHI          | Karachi                    | +5     |
| DEL:<br>DELHI            | Delhi                      | +5.5   |
| KTM:<br>KATHMANDU        | Kathmandu                  | +5.75  |
| DAC:<br>DHAKA            | Dhaka                      | +6     |
| RGN:<br>YANGON           | Yangon                     | +6.5   |
| BKK:<br>BANGKOK          | Bangkok                    | +7     |
| HKG:<br>HONG KONG        | Hong Kong                  | +8     |
| EUC:<br>EUCLA            | Eucla                      | +8.75  |
| TYO:<br>TOKYO            | Tokyo                      | +9     |
| ADL:<br>ADELAIDE         | Adelaide                   | +9.5   |
| SYD:<br>SYDNEY           | Sydney                     | +10    |
| LDH:<br>LORD HOWE ISLAND | Lord Howe Island           | +10.5  |
| NOU:<br>NOUMEA           | Noumea                     | +11    |
| WLG:<br>WELLINGTON       | Wellington                 | +12    |
| CHT:<br>CHATHAM ISLAND   | Chatham Islands            | +12.75 |
| TBU:<br>NUKUALOFA        | Nuku'alofa                 | +13    |
| CXI:<br>KIRITIMATI       | Kiritimati                 | +14    |

| City                      | Offset                 |
|---------------------------|------------------------|
| BAR:<br>BAKER ISLAND      | Baker Island -12       |
| PPG:<br>PAGO PAGO         | Pago Pago -11          |
| HNL:<br>HONOLULU          | Honolulu -10           |
| NHV:<br>MARQUESAS ISLANDS | Marquesas Islands -9.5 |
| ANC:<br>ANCHORAGE         | Anchorage -9           |
| LAX:<br>LOS ANGELES       | Los Angeles -8         |
| DEN:<br>DENVER            | Denver -7              |
| CHI:<br>CHICAGO           | Chicago -6             |
| NYC:<br>NEW YORK          | New York -5            |
| YHZ:<br>HALIFAX           | Halifax -4             |
| YYT:<br>ST. JOHN'S        | St. John's -3.5        |
| RIO:<br>RIO DE JANEIRO    | Rio de Janeiro -3      |
| FEN:<br>F. DE NORONHA     | Fernando de Noronha -2 |
| RAI:<br>PRAIA             | Praia -1               |

- The information in the above table is current as of July 2020.
- Time zones may change and UTC differentials may become different from those shown in the table above. If this happens, connect the watch with a phone to update the watch with the latest time zone information.

### Summer Time Table

When [AUTO] is selected for a city that observes summer time, switching between standard time and summer time will be performed automatically at the timing shown in the table below.

### Note

- Summer time start and end dates for your current location may be different from those shown below. If this happens, you can have new summer time information for your Home City and World Time city sent to the watch by connecting the watch with a phone. If the watch is not connected with a phone, you can change the summer time setting manually.

| City Name        | Summer Time Start               | Summer Time End                 |
|------------------|---------------------------------|---------------------------------|
| London           | 01:00, last Sunday in March     | 02:00, last Sunday in October   |
| Paris            | 02:00, last Sunday in March     | 03:00, last Sunday in October   |
| Athens           | 03:00, last Sunday in March     | 04:00, last Sunday in October   |
| Tehran           | 00:00, March 22 or 21           | 00:00, September 22 or 21       |
| Sydney, Adelaide | 02:00, first Sunday in October  | 03:00, first Sunday in April    |
| Lord Howe Island | 02:00, first Sunday in October  | 02:00, first Sunday in April    |
| Wellington       | 02:00, last Sunday in September | 03:00, first Sunday in April    |
| Chatham Islands  | 02:45, last Sunday in September | 03:45, first Sunday in April    |
| Anchorage        | 02:00, second Sunday in March   | 02:00, first Sunday in November |
| Los Angeles      | 02:00, second Sunday in March   | 02:00, first Sunday in November |
| Denver           | 02:00, second Sunday in March   | 02:00, first Sunday in November |
| Chicago          | 02:00, second Sunday in March   | 02:00, first Sunday in November |
| New York         | 02:00, second Sunday in March   | 02:00, first Sunday in November |
| Halifax          | 02:00, second Sunday in March   | 02:00, first Sunday in November |
| St. John's       | 02:00, second Sunday in March   | 02:00, first Sunday in November |

• The information in the above table is current as of July 2020.

## Supported Phones

For information about phones that can connect with the watch, visit the CASIO website.

[https://world.casio.com/os\\_mobile/wat/](https://world.casio.com/os_mobile/wat/)

## Specifications

### Accuracy at normal temperature :

±15 seconds per month average when time adjustment by communication with a phone is not possible.

### Timekeeping :

Analog

Hour, minute (moves every 20 seconds)

Digital

Hour, minute, second, month, day, day of the week

a.m./p.m.(P)/24-hour timekeeping

Full Auto Calendar (2000 to 2099)

Summer Time

### World Time :

38 cities (38 time zones) and Coordinated Universal Time (UTC)

Summer time

Home Time swapping

### Stopwatch :

Measurement unit

1/100 seconds (first hour)

1 second (after first hour)

Measuring range: 23 hours 59 minutes 59 seconds

Measurement Functions:

Elapsed time, split times, lap times

### Timer :

Measuring unit: 1 second

Measuring range: 60 minutes

Time setting unit: 1 second

Time setting range: 1 second to 60 minutes

10-second beeper when the end of the countdown is reached

### Alarm :

Time alarms

Number of alarms

5

Setting units

Hours, minutes

Alarm tone duration: 10 seconds

Hourly time signal: Beep every hour on the hour

### Mobile Link :

Auto Time Correction

Time setting adjusted automatically at preset time.

One-touch Time Correction

Manual connection and time adjustment

Phone finder

Watch operation sounds the alert sound of the mobile phone.

World Time

Current time for approximately 300 cities selected for the watch

Home Time/World Time swapping

Auto Summer Time Switching

Automatic switching between standard time and summer time.

Timer Settings

Alarm Settings

Reminder

Reminds you of anniversaries and other important dates.

Hand alignment correction

Data Communication Specifications

Bluetooth®

Frequency Band: 2400MHz to 2480MHz

Maximum Transmission: 0 dBm (1 mW)

Communication range: Up to 2 meters

(depends on environment)

### Double LED light :

Face LED light: Super Illuminator, afterglow, selectable illumination duration (approximately 1.5 seconds or 3 seconds)  
LCD LED backlight: Super Illuminator, afterglow, selectable illumination duration (approximately 1.5 seconds or 3 seconds)

### Other :

Power Saving, battery Indicator, selectable date format, selectable day of the week language, auto time adjustment on/off, operation tone on/off, Hand Shift

### Power Supply :

Solar panel and one rechargeable battery

Battery operating time: Approximately 7 months

Conditions:

Auto Time Adjustment: 4 times/day

Alarm: Once (10 seconds)/day

Illumination: Once (1.5 seconds)/day

Power Saving: 6 hours/day

Specifications are subject to change without notice.

## Copyrights and Registered Copyrights

- The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by CASIO Computer Co., Ltd. is under license.
- iPhone and App Store are trademarks of Apple Inc. in the United States and other countries.
- iOS is a trademark or registered trademark of Cisco Systems, Inc.
- GALAXY is a registered trademark of Samsung Electronics Co., Ltd.
- Android and Google Play™ are trademarks or registered trademarks of Google LLC.
- Other company names and product names used herein are trademarks or registered trademarks of their respective companies.

## Troubleshooting

### I can't pair the watch with a phone.

**Q1** I've never been able to establish a (pairing) connection between the watch and phone.

Are you using a supported phone model?

Check if the phone model and its operating system are supported by the watch.  
For information about supported phone models, visit the CASIO Website.

[https://world.casio.com/os\\_mobile/wat/](https://world.casio.com/os_mobile/wat/)

Did you install G-SHOCK Connected on your phone?

G-SHOCK Connected needs to be installed on your phone in order to connect with the watch.

🔗 ① [Install the app on your phone.](#)

Are your phone's Bluetooth settings configured correctly?

Configure the phone's Bluetooth settings. For details about setting procedures, see your phone documentation.

#### iPhone Users

- "Settings" → "Bluetooth" → On
- "Settings" → "Privacy" → "Bluetooth Sharing" → "G-SHOCK Connected" → On

#### Android Users

- Enable Bluetooth.

Other than the above.

Some phones need to have BT Smart disabled to use G-SHOCK Connected. For details about setting procedures, see your phone documentation.


On the Home Screen, tap: "Menu" → "Settings" → "Bluetooth" → "Menu" → "BT Smart settings" → "Disable".

### I can't reconnect the watch and phone.

**Q1** The watch will not re-connect with the phone after they are disconnected.

Is G-SHOCK Connected running?

The watch cannot re-connect with your phone unless G-SHOCK Connected is running on the phone. On your phone's Home Screen, tap the "G-SHOCK Connected" icon. Next, on the watch, hold down (C) for at least three seconds.

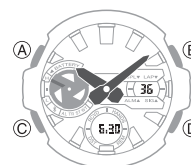

Have you tried turning your phone off and then back on again?

Turn your phone off and then back on, and then tap the "G-SHOCK Connected" icon. Next, on the watch, hold down (C) for at least three seconds.




Is a timer countdown operation in progress?

Connection with a phone is not possible while there is 30 seconds or less remaining on a countdown timer operation. Stop the countdown operation before connecting with the phone.


**Q2** I can't connect while my phone is in the Airplane Mode.

Connection with the watch is not possible while the phone's Airplane Mode is enabled. After disabling the phone's Airplane Mode, go to the phone's Home Screen and tap the "G-SHOCK Connected" icon. Next, on the watch, hold down (C) for at least three seconds.

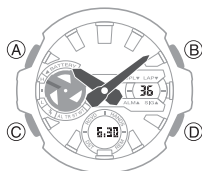


**Q3** I changed the phone's Bluetooth from enabled to disabled, and now I can't connect anymore.

On your phone, re-enable Bluetooth, and then go to the Home Screen and tap the "G-SHOCK Connected" icon. Next, on the watch, hold down (C) for at least three seconds.

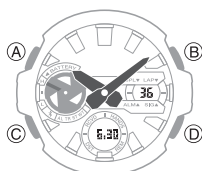

**Q4** I can't connect after turning off the phone.

Turn your phone off and then back on, and then tap the "G-SHOCK Connected" icon. Next, on the watch, hold down (C) for at least three seconds.

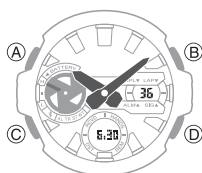


## Phone-Watch Connection

**Q1** I can't establish a connection between the phone and watch.

Have you tried turning your phone off and then back on again?

Turn your phone off and then back on, and then tap the "G-SHOCK Connected" icon. Next, on the watch, hold down (C) for at least three seconds.

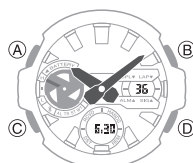

Has the watch been re-paired with the phone?

Delete the pairing information from G-SHOCK Connected and your phone (iPhone only), and then re-pair them.

🔗 [Deleting Pairing Information from G-SHOCK Connected](#)

🔗 ③ [Pair the watch with a phone.](#)

If you are unable to establish a connection...

After deleting pairing information from the watch, re-pair it with your phone.

🔗 [Deleting Pairing Information from the Watch](#)

🔗 ③ [Pair the watch with a phone.](#)

## Changing to a Different Phone Model

**Q1** Connecting the current watch to another phone.

Delete the pairing information from your watch and then pair it with the phone you want to connect with.

🔗 [If you purchase another phone](#)

## Auto Time Adjustment by Bluetooth Connection (Time Adjustment)

**Q1** When does the watch adjust its time?

The watch will connect with the phone and perform auto time adjustment at around 12:30 a.m., 6:30 a.m., 12:30 p.m. and 6:30 p.m. The connection is automatically terminated after auto time adjustment is complete.

**Q2** Auto time adjustment is not performed at a scheduled time.

Is auto time adjustment not being performed according to its normal schedule?

Note that auto time adjustment is not performed for 24 hours after swapping of the Home Time and World Time, or after the time setting is adjusted manually on the watch. Auto time adjustment will resume 24 hours after either of the above operations is performed.

Is auto time adjustment enabled?

Auto time adjustment will not be performed at the scheduled times unless it is enabled. Enable auto time adjustment.

🔗 [Using the Watch in a Medical Facility or Aircraft](#)

**Q3** Time is not displayed correctly.

If your phone is unable to receive a signal because you are outside its service range or for some other reason, the watch may not be able to display the correct time. If this happens, connect the phone to its network and then adjust the time setting.

**Q4** Hands are out of alignment.

Strong magnetism or impact can cause the hands to go out of alignment. Adjust hand alignment.

🔗 [Adjusting Hand Alignment](#)

- Check the information below to find out how to align the hands manually.

🔗 [Hand Alignment Adjustment](#)



## Alarm and Hourly Time Signal

**Q1** An alarm and/or the hourly time signal do not sound.

Is the watch's battery charged?

Keep the watch exposed to light until it recharges sufficiently.

↪ [Charging](#)

Other than the above.

Enable the alarm and/or the hourly time signal.

↪ [Configuring Alarm Settings](#)


↪ [Enabling the Hourly Time Signal](#)

## Hand Movement and Indications

**Q1** I don't know what mode the watch is in.

You can determine the current mode by checking the mode hand position. Use (C) to navigate between modes.

↪ [Navigating Between Modes](#)

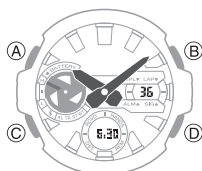

**Q2** All hands are stopped and buttons do not work.

The battery is dead. Keep the watch exposed to light until it recharges sufficiently.

↪ [Charging](#)

**Q3** The hands suddenly start moving at high speed.

This is due to one of the reasons below, and does not indicate malfunction. Simply wait until normal hand movement resumes.

- The watch is recovering from a power saving state.  
↪ [Power Saving Function](#)
- Watch is connected with a phone to adjust its time setting.  
↪ [Auto Time Adjustment](#)

**Q4** Hands are stopped and buttons do not work.

The watch is in the charge recovery mode. Wait until the recovery process is complete (for about 15 minutes). The watch will recover more quickly if you place it in a brightly lit location.

**Q5** Why is the current time indicated by the watch is off by a certain amount of time (nine hours, three hours and 15 minutes, etc.)?

The city setting is not correct. Select the correct setting.

↪ [Setting a Home City](#)

**Q6** The current time indicated by the watch is off by one hour or 30 minutes.

The summer time setting is not correct. Select the correct setting.

↪ [Setting a Home City](#)

**Q7** The time indicated by the hands is different from the digital time.

Strong magnetism or impact can cause the hands to go out of alignment. Adjust hand alignment.

↪ [Adjusting Hand Alignment](#)

- Check the information below to find out how to align the hands manually.  
↪ [Hand Alignment Adjustment](#)

## Other

**Q1** I can't find the information I need here.

Visit the website below.

<https://world.casio.com/support/>